


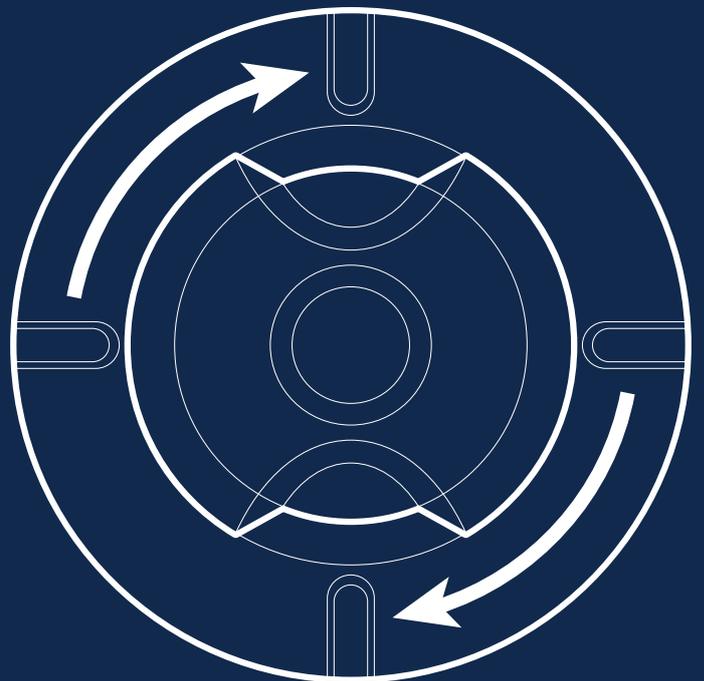

INSTALLATION GUIDE

Hydrostatic Valve

Installation + Removal



Hydrostatic Valve

Installation + Removal


Prior to installation

1. Installers must read these warnings and all instructions before using this product.
2. Failure to follow instructions can result in product failure.
3. Hydrostatic valve is a replacement component and must not be glued into the socket.

You will need - located in your skimmer box


- » Hydrostatic Valve
- » Hydrostatic Valve Tool

Installing your hydrostatic valve:

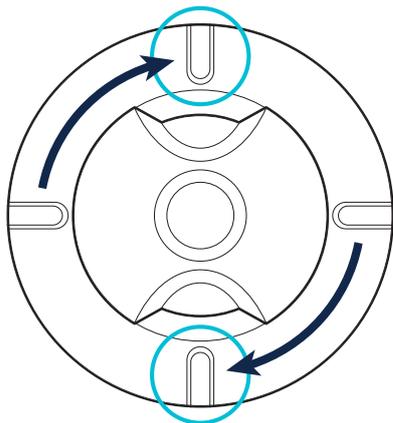

1. Check Hydrostatic valve is in good working condition (no cracks or broken parts). Check the valve opens and closes when pressure is put on the hexagonal screw on the bottom of the valve, and that the hexagonal screw is tight.
2. Remove any debris, soil & miscellaneous material from beneath the area where the hydrostatic valve will be located. Failure to do so may cause the valve to open & the pool will leak.
3. Ensure that the thread of the valve and the seat of the socket is clean and free of any foreign material.
4. Place the gasket on the valve thread. Using a Hydrostatic valve tool, screw the valve into the socket by screwing it clockwise.
5. Ensure that the hydrostatic valve is not cross-threaded and is screwed all the way in. Failure to do so will cause a leak. Do not over tighten, do not assemble with power tools.

Removing your hydrostatic valve:

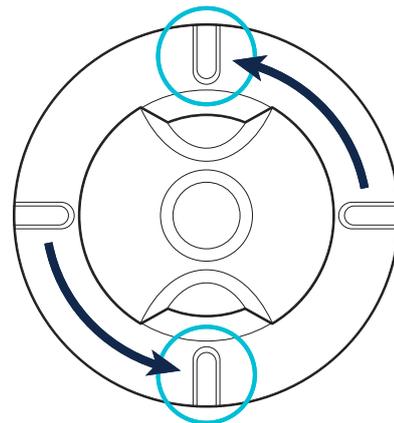

1. Using a hydrostatic valve tool, twist the valve anti-clockwise to remove the valve from the socket.

